


How to check the software version on an EBC


From the Main Screen click on "EtherCAT"



Then click on "Diagnostics"

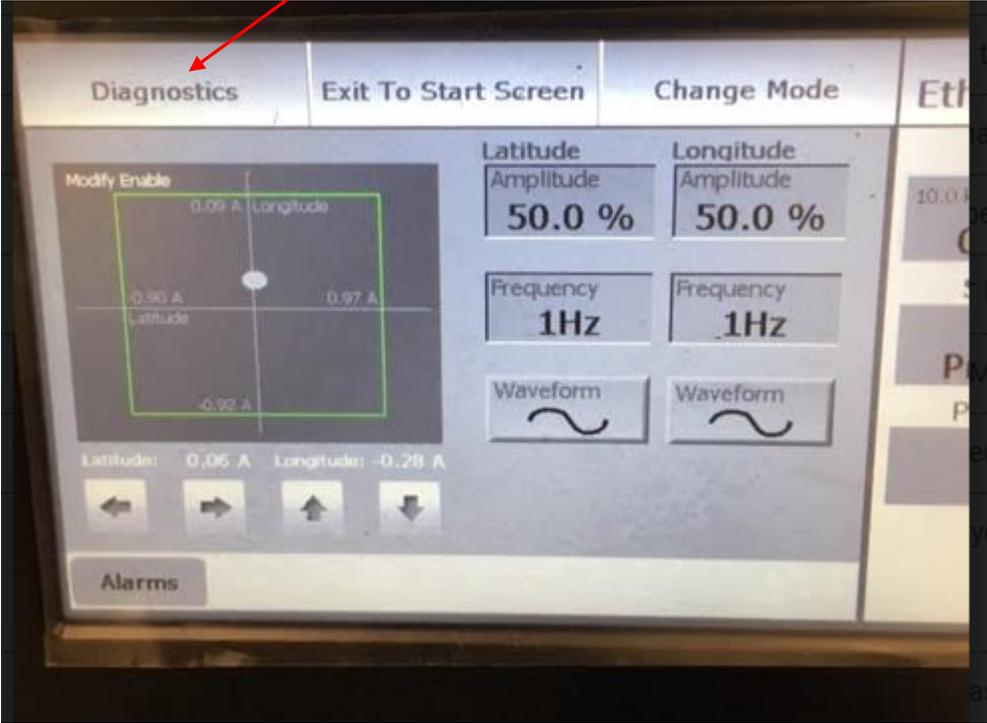

Then click on the lower right hand corner to get to Page 2 of this screen

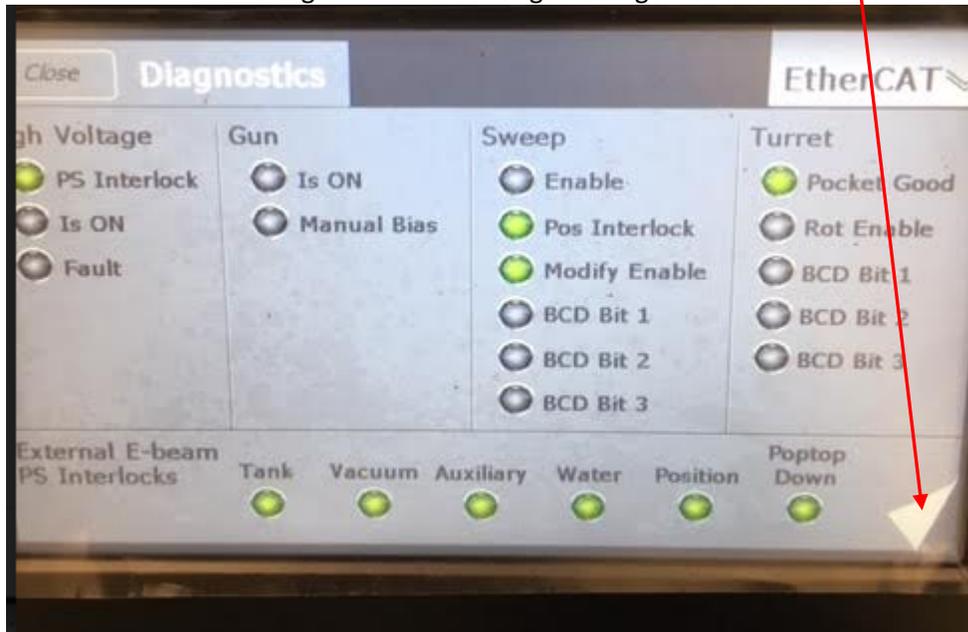

And you arrive at the screen below

